

AMOUR



WAND
VIBRATOR

EN

Buttons:

Press the [on/off] button for 3 seconds to turn the wand head on/off. Press again to change the vibrations: 5 vibration modes. Long press to turn the device off.

How to charge:

Magnetic USB charging. When the charging cable is attached to the 2 magnets on the product and the USB-end is plugged in to a computer or USB charger, the indicator will light up, the button will flash, and the device will start charging. It takes 120 minutes to fully charge. When the device is fully charged, the indicator light stops flashing. After that the device can work continuously for 90 minutes.

Tonga BV
Noordpolderstraat 21
4571 LR Axel
The Netherlands
www.tongabv.com

EN

Cleaning and maintenance:

Clean the device with warm water and soap. Pat dry with a clean lint-free cloth. Keep the product in a cool and dry place, clean and separate from other materials and out of children's reach. Avoid direct sunlight or high temperature. Don't use alcohol to clean the product. The product is waterproof level IPX6 and not suitable for submersion.

Caution:

This product is not intended for therapeutic purposes. It should not be used on swollen or inflamed areas of the skin. Prolonged and frequent use is not advised or recommended.