

DREAM TOYS GLAM G-SPOT

User manual



CONTROL

- 1) Press the top "power" button for about 3 seconds to switch the vibrator to standby mode. It will welcome you with the LED diodes lighting up and a short vibration.
- 2) By successive short presses of the same button, you turn on and change the individual vibration and pulsating modes of the tip.
- 3) With short presses of the bottom button with the "wave" symbol, you turn on and change the individual vibration rhythms of the stimulator.
- 4) Press the "power" button for about 3 seconds to turn off the vibrator.

MAINTENANCE

After each use, rinse the product with lukewarm water.

We also recommend using an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The product is **water resistant**, so maintenance is very easy.

The product can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The product is powered by an integrated battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

Charging time is about 120 minutes.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator and magnetic USB cable for charging.