

Fleur

Bullet Vibrator

A compact precision-point vibrator with a flexible head and delicate petals for targeted external stimulation.

5 INTENSITIES

5 PATTERNS

WATERPROOF

USB RECHARGEABLE



QUICK FACTS

Material

Medical-grade silicone

Control

3-button operation

Charging

Magnetic USB cable

Use

External stimulation

Settings

25 combinations

Design

Designed in Australia


READ BEFORE FIRST USE

Fully charge and clean Fleur before use. Start on the lowest intensity. This product is for adult external use only. Stop immediately if you feel pain, numbness or irritation.

PRODUCT EAN **9356358005572**

Know your Fleur

Three simple buttons let you combine five intensities with five vibration patterns.

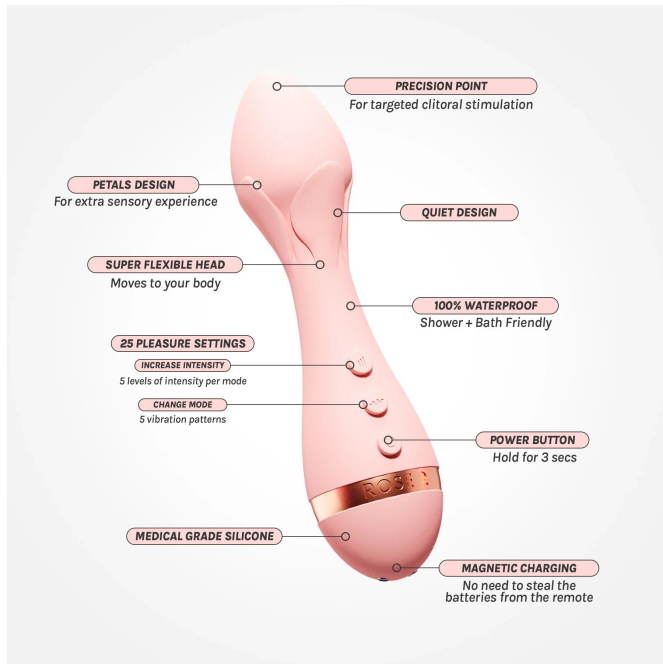

Product feature diagram



Intensity button

Short press

Cycles through 5 vibration strength levels.



Mode button

Short press

Cycles through 5 vibration patterns.



Power button

Press and hold for 3 sec

Turns Fleur on or off.

Key design features

Precision point

The smooth tip focuses vibration on a small external area.

Petal texture

The flexible petals add gentle, varied surface sensation.

Flexible head

Angle the head lightly to suit your body and preferred pressure.

25 pleasure combinations

Choose one of 5 patterns, then adjust it through 5 intensity levels. Start low and increase gradually.

Waterproof design

Suitable for shower or bath use. The USB cable and power source must always remain dry.

How to use Fleur

Take your time, use light pressure and let comfort guide you.

1 Charge fully

Attach the supplied magnetic USB cable to the charging contacts while the toy is completely dry.

2 Clean and inspect

Wash and dry before first use. Do not use if the silicone, casing or charging contacts are damaged.

3 Add lubricant

Apply a small amount of water-based lubricant to Fleur and the chosen external area. Avoid silicone- or oil-based lubricant.

4 Switch on

Press and hold the power button for 3 seconds. Begin with the lowest intensity, especially on first use.

5 Explore settings

Short-press the mode button to change pattern and the intensity button to change strength. Use the tip or petals externally.

6 Finish and clean

Hold the power button for 3 seconds to switch off. Clean, rinse and dry thoroughly before storage.

Using the precision tip and petals

- Use Fleur on external erogenous areas, including around the clitoris or nipples.
- Try the smooth tip for focused stimulation and the petal edges for a softer, wider sensation.
- Glide, circle or hold in place. Avoid excessive pressure and prolonged use on one spot.
- Fleur is not designed for vaginal or anal insertion. Never insert the whole device.

Charge, clean and store

Charging

1. Switch Fleur off and dry it completely. 2. Align the supplied magnetic cable with the charging contacts. 3. Connect to a suitable 5V USB power source. 4. Disconnect when the charge indicator shows complete.

Charging safety

Charge in a dry, ventilated place. Never use Fleur while charging. Keep the USB plug and cable away from water. Do not leave charging unattended or use a damaged cable.

Cleaning after every use

1 Switch off

Disconnect the charging cable and confirm the device is off.

2 Wash

Use warm water with mild, unscented soap or a suitable toy cleaner.

3 Dry

Rinse away residue, pat dry with a lint-free cloth, then air-dry fully.

Avoid

Bleach, alcohol, abrasive cleaners, boiling, dishwashers and direct heat. These may damage the silicone, finish or seals.

Troubleshooting

Will not switch on

Recharge fully; then hold the power button for a full 3 seconds.

Will not charge

Dry and clean the contacts; realign the magnetic cable; try a known working 5V USB source.

Feels weaker than usual

Recharge fully and check that the magnetic contacts are clean and dry.

Stops unexpectedly

The battery may be low. Switch off, allow to cool if warm, then recharge.

Storage

Store clean, dry and switched off in a cool place away from sunlight, heat, sharp objects and other toys. Recharge periodically during long storage.

Safety warnings

STOP USE IMMEDIATELY

Stop if you experience pain, numbness, irritation, bleeding or unusual discomfort. Seek medical advice if symptoms persist.

Essential precautions

- For adults aged 18+ only. Keep away from children and pets.
- For external stimulation only. Do not insert vaginally or anally.
- Clean before first use and after every use.
- Inspect before use. Do not use if torn, cracked, swollen, leaking, corroded or otherwise damaged.
- Do not use on broken, inflamed, numb or irritated skin.
- Use only with consent. Do not use on anyone who cannot communicate discomfort.

- Start at low intensity. Avoid excessive pressure or prolonged use on one area.
- Use water-based lubricant only to protect the silicone.
- For personal use. If shared, use an appropriate barrier and clean between users and body areas.
- Do not use while charging. Never take the cable or USB power source into the bath or shower.
- Do not open, modify, crush, puncture, burn or expose the battery to extreme heat.
- Consult a healthcare professional if pregnant, postpartum, recovering from surgery or concerned about a medical condition.

Water and electricity

Fleur is marketed as waterproof, but electrical charging accessories are not. The toy and charging contacts must be completely dry before charging.

Battery care

The rechargeable battery is sealed inside. Do not attempt removal. Stop use if the device becomes unusually hot, swollen, damaged or emits an odour.

Disposal and support

Do not place the device or battery in household waste. Take it to an approved electrical and battery recycling point. For faults, missing parts or warranty help, contact the retailer or VUSH and quote EAN 9356358005572.



Independent quick guide based on published VUSH Fleur product information and imagery. It supplements any original packaging instructions. Product images © VUSH.