

IONIC 3D WAVER BAB2369TTE

FEATURES

- Titanium-Tourmaline coated heating barrels
- LED temperature settings (140 °C - 160 °C - 180 °C - 200 °C - 210 °C)
- Active ionic - True ionic generator
- Cool tip
- On/off switch
- 2.70 m swivel cord

Titanium-Tourmaline coating

Incomparable durability. Heat distribution with perfect uniformity and perfect heat stability for optimum results.

Advanced Heat Management™

The waver have a built-in, self-regulating heating system of the latest generation, the Advanced Heat Management, which gives you precise and continuous electronic control of the temperature. This technology means the unit heats up immediately to very high temperatures and the temperature remains stable to the nearest half degree. The unit also reacts quickly and has great recovery capacity.

Real ionic generator

Hair is made of keratin and keratin tends to get positively charged. Styling, brushing, drying generate static electricity in the hair because of the friction with

the bristles of the brushes or even the hot air. Each hair being positively charged, gets to push others away, which gives this scattering effect called "staticky hair".

The intensity of this effect is even greater, should hair be fragile, dry, damaged or colortreated. The antistatic effect of the negative ions generated by the appliance decreases tension at the hair surface and therefore improves it. This will reinforce shine and softness and make hair easier to disentangle and style.

Shine and softness are the main characteristics of beautiful hair. The waver sputters slightly, this sound is normal for a high output ion generator.

WARNING

The barrel becomes very hot in a few seconds and should not touch the skin once the wand is plugged in. This iron becomes extremely hot when it is set to the

highest temperature. Always test on a hair strand to make sure the setting is appropriate for the hair.

USE

- Plug the curling iron in.
- Select the desired temperature (please see temperature control guide).

Section dry hair evenly, and comb each section.

- Position the iron on the hair as far up as you want hair to be styled, being careful not to let the iron touch the scalp.
- Close the iron with the hair between the barrels and hold for a few seconds.
- Repeat this process down to the end of the hair if

desired.

For optimal hold and results, we recommend using BaByliss PRO styling products.

CLEANING AND MAINTENANCE

Before removing any hair-product residues left on the wand;

- Check that the iron is turned off and unplugged and that it has cooled.
- Clean the iron using a damp cloth and noncorrosive detergent or soap.

Before using again, check that the appliance is dry.

BEFORE USING THE APPLIANCE, PLEASE READ THE

SAFETY INSTRUCTIONS CAREFULLY!

SAFETY INSTRUCTIONS

CAUTION: The polyethylene bags in which the appliance is stored, as well as the packaging, may be dangerous. Keep the bags out of the reach of babies and children.

Do not use the bags in cradles, baby cots, strollers or playpens. The fine film may stick to a child's nose and mouth and prevent breathing. The bag is not a toy.

CAUTION: Do not use over or near sinks, tubs, showers or other water containers. Keep the appliance dry.

If you use the appliance in the bathroom, do not forget to unplug it after each use. The proximity of a water source may be dangerous even if the appliance is switched off. To provide additional protection of the electrical circuit in the bathroom, we recommend the

installation of a residual current device (DDR) for the defined operational differential current not exceeding 30 mA. Please consult your plumber.

Do not immerse the appliance in water or any other liquid.

If the supply cord is damaged, it must be replaced by the manufacturer, its service centre or persons with relevant qualifications in order to avoid a hazard.

Do not use the appliance if it has been dropped or if it shows obvious signs of damage.

Do not leave the appliance unattended when plugged in or switched on.

In the event of problems while using the appliance, unplug it immediately.

Unplug the appliance after each use and before

cleaning.

Take care to avoid any contact of the hot surfaces of the appliance with your skin, especially the ears, eyes, face and neck.

This appliance may be used by children aged 8 years or older and persons with limited physical, sensory or mental capabilities, as well as persons who are inexperienced, if these persons are placed under supervision or if they have been instructed on how to use the appliance safely and if they understand the potential risks which arise from the use of the appliance. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be performed by unsupervised children.

Allow the appliance to cool before storing it.

Do not wrap the cord around the appliance, and make

sure that the cord is not twisted or folded before storing it in order to prevent damage.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

In the interest of all of us and in order to participate actively in the joint protection of the environment:

Do not put the appliance in municipal waste.

Use the collection and disposal systems that are available in your country.

Some appliances can be recycled or reused.