

IMPORTANT SAFETY INSTRUCTIONS

- Do not place appliance on any surface while it is operating.
- While using the appliance keep your hair away from the inlets.
- Do not use with voltage converter.
- Do not use an extension cord to operate the dryer.

Thank you very much for purchasing the GoldPro™
1875W Speed Dryer.

- Please make sure to read this operation manual thoroughly before use.

- Please keep this operation manual in a handy place for the operators to read it anytime they need.

FEATURES & BENEFITS

- 24K Gold in dryer barrel for even heat distribution
- Ceramic Mineral Complex infuses moisture and condition
- Reduces drying time by up to 50%
- 1875 Watts
- Lightweight, 1.2 lbs.
- Superior shine & condition

OPERATING INSTRUCTIONS

This dryer has a polarized plug (one blade is wider than

the other). As a safety feature; this plug will fit into a polarized outlet only one way. If the plug does not fit securely, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CHECK SAFETY PLUG CIRCUIT INTERRUPTOR EVERY TIME YOU USE DRYER

This dryer is equipped with a Ground Fault Circuit Interrupter (GFCI), a safety feature that will not allow the dryer to operate, in the event of immersion in water. To make sure the GFCI is functioning properly, check the safety plug:

Simply place the plug into the outlet and press the test button. The dryer should immediately stop. To resume operating the dryer, press the reset button.

MAINTENANCE

The dryer is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. The exterior of the dryer should be wiped clean with a damp cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs an automatic safety device will shut off the dryer. If this occurs, unplug the cord and allow the dryer to cool for 10 to 15 minutes before starting. Make sure the air vents are clean.

STORAGE

When not in use, your dryer should be disconnected and stored in a safe, dry location, out of reach of children. Never wrap the cord around the dryer. Allow the cord to hang loose and straight at the point of entry

into the dryer.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING, KEEP AWAY FROM WATER.

DANGER: As with most electrical appliances, electrical parts are electrically live even when the switch is off:

- Always "unplug it" immediately after using.
- Do not use while bathing.
- Do not place or store appliance where it can fall or be

pulled into a tub or sink.

- Do not place in or drop into water, or any other liquid.
- If an appliance falls into water, "unplug it" immediately. DO NOT REACH INTO THE WATER!

WARNING: To reduce the risk of burns, electrocution, fire or injury to persons:

- This appliance should never be left unattended when plugged in.

Close supervision is necessary when this appliance is used by, on, or near children or invalids.

- Use this appliance only for its intended use as described in this manual. DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.

- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped in water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces. Do not pull, twist, or wrap cord around the dryer.
- Never block the air openings of the appliance or place it on a soft surface, such as bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, etc.
- Never use while sleeping.
- Never drop or insert objects into any openings.
- Do not use outdoors or operate where aerosol (spray)

products are being used or where oxygen is being administered.

Do not direct hot air toward eyes or other heat sensitive areas.