

**Thank you very much for purchasing the PowerLight™
1875W Speed Dryer.**

Please make sure to read this operation manual thoroughly before use.

Please keep this operation manual in a handy place for the operators to read it anytime they need.

FEATURES & BENEFITS

Powerful airflow (1875W) for faster drying without damage.

Ultra-lightweight for easy all-day use.

Nanolonic™ Mineral in barrel smoothes & hydrates hair.

Longer-lasting AC Motor.

Leaves hair soft & shiny.

Eliminates frizzies and static.

GENERAL SPECIFICATIONS

SUBJECT BI-0388

Rated Voltage - 220V/240V

Frequency (Hz) - 50Hz

Rated Wattage - 1875W

Length of A.C. cord - 9ft/2.7m

Weight - 1 lib

Accessory - 2 Nozzles

OPERATING INSTRUCTIONS

This dryer is intended for professional use. This dryer has a polarized plug (one blade is wider than the other) As a safety feature; this plug will fit into a polarized outlet only one way. If the plug does not fit securely, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CHECK SAFETY PLUG CIRCUIT INTERRUPTOR EVERY TIME YOU USE DRYER

This dryer is equipped with a Ground Fault Circuit Interrupter (GFCI), a safety feature that will not allow the dryer to operate, in the event of immersion in water. To make sure the GFCI is functioning properly, check the safety plug:

Simply place the plug into the outlet and press the test

button. The dryer should immediately stop. To resume operating the dryer, press the reset button.

MAINTENANCE

The dryer is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. The exterior of the dryer should be wiped clean with a damp cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat.

If overheating occurs an automatic safety device will shut off the dryer. If this occurs, unplug the cord and allow the dryer to cool for 10 to 15 minutes before starting. Make sure the air vents are clean.

STORAGE

When not in use, your dryer should be disconnected

and stored in a safe, dry location, out of reach of children. Never wrap the cord around the dryer. Allow the cord to hang loose and straight at the point of entry into the dryer.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING, KEEP AWAY FROM WATER.

DANGER- As with most electrical appliances, electrical parts are electrically live even when the switch is off:

Always "unplug it" immediately after using.

Do not use while bathing.

Do not place or store appliance where it can fall or be pulled into a tub or sink.

Do not place in or drop into water, or any other liquid.

If an appliance falls into water, "unplug it" immediately
DO NOT REACH INTO THE WATER!

WARNING- To reduce the risk of burns, electrocution, fire or injury to persons:

This appliance should never be left unattended when plugged in.

Close supervision is necessary when this appliance is used by, on, or near children or invalids.

Use this appliance only for its intended use as described* in this manual. **DO NOT USE ATTACHMENTS NOT RECOMMENDED BY THE MANUFACTURER.**

Never operate this appliance if it has a damaged cord plug, if it is not working properly, or if it has been dropped, damaged, or dropped in water. Return the appliance to a service center for examination and repair.

Keep the cord away from heated surfaces. Do not pull twist, or wrap cord around the dryer.

Never block the air openings of the appliance or place on a soft surface, such as bed or couch, where the air openings may be blocked. Keep the air openings free lint, hair, etc.

Never use while sleeping.

Never drop or insert objects into any openings.

Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being

administered.

Do not direct hot air toward eyes or other heat sensitive areas.

Attachments may be hot during use Allow them to cool before handling.

Do not place appliance on any surface while it is operating.

While using the appliance keep your hair away from the inlets.

Do not use with voltage converter.

Do not use an extension cord to operate the dryer.

SAVE THE INSTRUCTIONS!

