

**Thank you very much for purchasing the StyleWinder"  
1" Rotating Styling Iron.**

- Please make sure to read this operation manual thoroughly before use.
- Please keep this operation manual in a handy place for the operators to read it anytime they need.

## **IMPORTANT SAFETY INSTRUCTIONS**

When using electrical appliances, especially when children are present, basic safety precautions should always be followed including the following:

**READ ALL INSTRUCTIONS BEFORE USING**

**KEEP AWAY FROM WATER!**

**DANGER** - As with most electrical appliances, electrical parts are electrically live even when the switch is off:

To reduce the risk of death by electric shock:

1. Always "unplug it" immediately after using.
2. Always turn the iron off when not in use.
3. Do not use while bathing.
4. Do not place or store appliance where it can fall or be pulled into a tub or sink.
5. Do not place in or drop into water or other liquid.
6. If an appliance falls into water, "unplug it" immediately Do not reach into the water.

**WARNING** - To reduce the risk of burns, electrocution,

fire, or injury to persons:

1. Plug the iron into an electrical outlet of AC 220V/50Hz
2. An appliance should never be left unattended when plugged in
3. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities
4. Use this appliance only for its intended use as described in this manual Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and

repair.

6. Keep the cord away from heated surfaces Do not wrap the cord around the appliance

7. Never use while sleeping

8. Never drop or insert any object into any opening or hose,

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered

10. Do not use an extension cord with this appliance  
Avoid multiple cables to a plug

11. This styling iron and clamp are hot when in use. Do not let eyes and bare skin touch heated surfaces

12. Do not place the heated styling iron directly on any

surface while it is hot or plugged in Use the iron holder provided

13. Suitable for Dry Location ONLY

## **OPERATING INSTRUCTIONS**

1. Turn on the StyleWinder" Iron by pressing the on/off power button ©.
2. When the Iron reaches its normal operating temperature (about 180°C), adjust the iron temperature as needed; press the + button to increase the temperature and press the -button to decrease the temperature.

Blue Light (60 - 160°C) Fine hair

Green Light (160 - 185°C) Normal hair

**Red Light (185 - 226°C) Thick/Coarse hair**

3. To turn off the iron press the power button.

This iron has a European plug for 220V. As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit securely, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

### **Styling Tips**

- Comb and section dry hair
- Use comb when ironing for best results

### **Finishing**

Unplug the appliance at the end of use.

## FEATURES & BENEFITS

### Nanolonic™ Mineral Technology

- Negative Ions micronize water molecules
- Allows for faster styling time (up to 50% faster)
- Seals and smoothes the cuticle
- Hydrates hair for silky, smooth condition Far Infrared Technology. Far Out.
- Styles hair from the inside out
- Allows for quick styling without damage
- Leaves a smooth, silky feel
- Gentle and conditioning Dual Heaters, Hot Stuff.

- Helps maintain constant styling heat
- Conducts heat more efficiently
- Curls, waves and styles hair faster
- Makes hair more manageable

220V, 57W

## **MAINTENANCE**

### **Daily Maintenance**

For the safe usage of the iron, check the following daily:

- Check the cord and surface of the cord. Never use if any parts are split, torn, or damaged.
- Check the plug and never use if it is cracked, split or damaged.



- Check the plug pins and never use if transformed or damaged
- Check the controller and do not use if cracked, split, broken or damaged.
- When not in use for a long time, clean and dry the entire iron and store in a cool, dry place. When ready to use it again, follow the directions of daily maintenance confirming each function of the iron.

## **Daily Cleaning**

Unplug the iron from the power source and wipe with a damp cloth.

## **WARNING**

Do not wipe the iron with thinner, benzene, gasoline, lamp oil, and other solvents or chemicals, as that may

cause accidents or malfunction

## **Defects and Malfunction**

In case of defects or malfunction, please check the following points before contacting a repair service center:

- In case some malfunction is found, unplug the iron and contact your service center.
- Bio Ionic is not responsible for damage due to operator accidents, such as dropping the iron on the floor.

## **USAGE TIPS & STYLING TIPS**

### **Usage Directions**

- Begin with a wide section.

- Apply Thermal-Active™ Bodifying Blow-Dry Spray to achieve a long lasting curl.
- Clamp the hair where you want the curl to begin.
- Wrap the section around the iron.
- Roll the clamp using your thumb and index finger to spin the Rotating StyleRoller.
- Keep rotating & wrapping all the way around the barrel until the hair releases.

## **Styling Tips**

- For a longer lasting curl, hold the iron for 5 seconds then spin the iron until the hair releases.
- For loose curls & waves use the 1.25" or 1" StyleWinder" Iron

- For tight curls & waves use the 3/4" StyleWinder" Iron
- For longer-lasting curls & waves on the go use the StyleWinder\* Mini Iron

## **Note**

- See the StyleWinder" DVD for more information on creating styles.