

BEFORE USING THE APPLIANCE, PLEASE READ THESE SAFETY INSTRUCTIONS CAREFULLY!

SAFETY INSTRUCTIONS

CAUTION: The polyethylene bags in which the appliance is stored, as well as the product packaging, may be dangerous. Keep these bags out of the reach of babies and children. Do not use the bags in cradles, baby cots, strollers or playpens. The fine plastic may stick to a child's nose and mouth and prevent breathing. The bag is not a toy.

CAUTION: Do not use over or near sinks, tubs, showers or other water containers. Keep the appliance dry.

Do not immerse the appliance in water or any other

liquid.

Do not use the appliance if it has been dropped or if it shows obvious signs of damage.

Do not leave the appliance unattended when switched on.

This appliance may be used by children aged 8 years or older, persons with reduced physical, sensory or mental capabilities, or persons who are inexperienced, if these persons are properly supervised or if they have been instructed on how to use the appliance safely and if they understand the related risks. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be performed by unsupervised children.

Insert the batteries in the space designated for that

purpose and observe the correct orientation of the poles (depending on the direction marked with the + and - symbols).