

Brush place gradually to individual teeth, push and let the brush work. The pressure reduces the effectiveness of the toothbrush during toothbrushing. The perfect cleaning, use toothpaste. After using the brush rinse thoroughly under running water.

Product contains batteries and/or recyclable electric waste.

For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.

Usage by children under age 3 is not recommended.

Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given

supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and maintenance shall not be performed by children. Children shall not play with the appliance.

Batteries may leak if empty or not used for a long time.

Avoid skin contact whilst handling leaking batteries.

Keep away from children.

Do not swallow. If swallowed, seek medical advice at once.

Remove fully discharged batteries immediately. Replace all batteries at the same time.

Do not mix used and new batteries, different brands or types. Do not disassemble, recharge or dispose of in

fire.

Do not use attachments which are not recommended by the manufacturer.

Replace brush (head) every 3 months or sooner if brush head becomes worn. For tooth brushing only. Do not chew or bite on brush. Do not use as a toy or without adult supervision.