

Please read the usage instructions carefully before first use.

## **IMPORTANT**

The appliance must be mounted in a way that it cannot fall into water or drop to the floor. The plug should always be accessible. Periodically check the cord for damage. If cord is damaged, take the charging unit to an Oral-B Service Centre.

A damaged or non-functioning unit should no longer be used. Do not modify or repair the product. This may cause fire, electric shock or

injury.

This product is not intended for use by children under age 12. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use the product, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Oral irrigators shall be used only with liquids defined in the manufacturer's instructions.

Use this product only for its intended use as described in this manual. Do not use

attachments or chargers which are not recommended by the manufacturer.

## **WARNING**

If the product is dropped, the brush head should be replaced before the next use even if no damage is visible. Do not place the appliance in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.

Do not disassemble the product. When unplugging, always hold the power plug instead of the cord. Do not touch the power

plug with wet hands. This can cause an electric shock. If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.

## **Description**

a Irrigator jet

b Jet switch

c Jet compartment

d Jet release button

e On/off switch

f Water pressure control dial

g Handle switch (water stop and go)

h Irrigator handle

i Water container (600 ml)

j Cord storage

Specifications For voltage specifications please refer to the bottom of the charging unit.

Noise level: 68 dB (A) Using the irrigator

Before using for the first time, fill the water container (i) and allow the water to run through completely by holding the irrigator

handle (h) over a washbasin.

1. Attach one of the irrigator jets (a) to the handle until it locks into place (1). Fill the water container with lukewarm water. If you want to add mouthwash into the water, please make sure you fill the water container with lukewarm water first, then add the mouthwash.
2. Turn on the irrigator by pressing the on/off switch (e) (2). (The handle switch should be in the lower position = water stop).
3. Select the water pressure with the pressure control dial (f) (1 = gentle, 5 =

strong) (3). We recommend that you start with setting 1, especially if your gums tend to bleed or if children are using the irrigator.

4. Bend over a washbasin and guide the jet to your teeth and gums. Slide the handle switch (g) up to start the water stream (4). Keep your mouth slightly open to allow the water to run into the washbasin. You can choose between two different jet functions by sliding the jet switch (b) down or up (before doing so, turn off the water stream by sliding the handle switch down): Rotating stream for general cleaning and gum massage (jet switch in lower position): The rotation of the water stream and its micro-bubbles is

designed for easy penetration and gentle gum massage (6).

Mono stream (jet switch in upper position):  
The straight water stream is designed for targeted cleaning (7).

## **APPROVED**

Effective Date 28Feb2013 GMT - Printed  
08Mar2013 Page 4 of 42 5

Maximal operation time: 15 minutes

Cooling off time: 2 hours In general we recommend to replace the irrigator jet every 3 months.



After use Always empty the water container entirely. If your dentist has recommended the use of mouthwash with your irrigator, allow some clean water to run through the irrigator before you empty the container entirely to prevent any deposit build-up. Make sure you keep the irrigator switched on until the water stops running through the irrigator jet, to prevent bacteria from collecting in the standing water. Press the on/off switch to turn off the irrigator. To take off the irrigator jet, press the jet release button (d) (5).

Always wipe the handle and the irrigator jet dry; place the handle back onto its base and store the irrigator jet in the jet compartment

(c).

**Cleaning** Regularly clean the housing with a damp cloth. The water container and the jet compartment are removable and dishwasher-safe. Subject to change without notice. Please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at an Oral-B Braun Service Centre or at appropriate collection points provided in your country.

## **Guarantee**

We grant 2 years limited guarantee on the product commencing on the date of

purchase. Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.

This guarantee does not cover:

damage due to improper use, normal wear or use, especially regarding the brushheads, as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used. To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Oral-B Braun Service Centre.

For UK only: This guarantee in no way affects your statutory rights. Warranty replacement brush heads and accessories Oral-B warranty will be voided if electric rechargeable handle damage is found to be attributed to the use of non-Oral-B replacement brush heads and/or accessories.

Oral-B does not recommend the use of non Oral-B replacement brush heads and/or accessories. Oral-B has no control over the quality of nonOral-B replacement brush heads and/or accessories. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads and/or accessories, as communicated with the electric rechargeable handle at time of initial purchase.

Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads and/or accessories. Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads and/or accessories on handle wear. All

Oral-B replacement brush heads and/or accessories carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads and/or accessories or handle parts under any other brand name.