

Thank you for purchasing your new Remington® product. Before use, please read the instructions carefully, and keep them in a safe place for future reference.

PRODUCT FEATURES

- A. Luxury Pearl Ceramic coating
- B. 32mm large barrelled tong
- C. Digital display 130°C -210°C
- D. Ready to use in 30 seconds
- E. On-off switch - Plug in the unit, press and hold the on-off switch for two seconds to turn on hold again for two seconds to switch off.

F. Switch lock function :

Set the desired temperature by pressing +/- buttons and lock the switch settings by pressing the '-' button for 2 seconds. A 'lock' symbol will appear on the display. This will prevent accidentally changing the temperature settings whilst styling. To unlock the switch settings, hold down the '-' button again for 2 seconds.

G. Cool tip

H. Heat protection stand

I. Automatic safety shut off – This unit will automatically switch itself off after 60 minutes and no button is pressed.

J. Protection glove – first line protection only (not shown) LCD display

K. Heat resistant pouch

L. 3m salon length swivel cord

M. Multi-voltage: For use at home or abroad: When used at 120V the heat up times and temperatures may vary.

5 year guarantee

INSTRUCTIONS FOR USE

Before use make sure hair is clean, dry and tangle free.

Plug in the unit, press and hold the on-off switch for two seconds to switch on. Press again for two seconds to switch off.

For extra protection and best results section the hair prior to styling and spray with heat protection spray.

When styling use protection proof glove provided to avoid any accidental burns and avoid touching the barrels.

Take a section of hair – smaller section create tighter curls – larger sections create softer waves

Hold the handle firmly in one hand the with the other wrap the section of hair around the heated barrel

Hold in place for approximately 10 seconds for the curl to form then release

Repeat this around the head to create as many curls as desired

When finished press again for 2 seconds to turn off

Unplug from the mains when not in use.

IMPORTANT INSTRUCTIONS

Due to the extreme heat capabilities of this styler, extra care should be taken when using.

While heating, during use and cooling, place on a flat, smooth, heat-resistant surface. Only hold unit at the end of the handle.

This is a high performance product, avoid frequent use to prevent damage to hair.

Please note regular use of styling products may deteriorate the coating.

Do not scratch the surface, as this will deteriorate the effectiveness of the coating.

CLEANING AND MAINTENANCE

Ensure the unit is unplugged and cool. Wipe clean any

build up of styling products with a damp cloth. Do not use an abrasive cleaning fluid to clean, as damage will occur.

SAFETY CAUTIONS

WARNING – FOR ADDITIONAL PROTECTION THE INSTALLATION OF A RESIDUAL CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

WARNING – THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM, IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.

This product is not suitable for use in bath or shower.

THE STYLER SHOULD BE UNPLUGGED FROM MAINS

SUPPLY WHEN NOT IN USE.

Do not leave the styler unattended when switched on.

Allow the styler to cool down before storage.

Do not immerse in water or other liquids.

Do not place styler on soft material e.g. carpet, bedding, towels, rugs etc.

Always ensure the voltage to be used corresponds to the voltage stated on the unit.

Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.

Do not use any attachments with this styler, other than those supplied by Remington®.

Avoid allowing any part of the hot plates to contact the face, neck or scalp.

Do not wrap the cord around the unit. Check cord regularly for any sign of damage.

This product is not intended for commercial or salon use.

Damaged cords can be dangerous. If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington® service dealer for repair or replacement in order to avoid a hazard.

Special tools are required for any examination, adjustment or repair. Unqualified repair work could

lead to hazardous conditions for the user.

We do not accept responsibility for damage to the product, persons or other items(s), caused by misuse, abuse or non-compliance with these instructions.

WIRING INSTRUCTIONS UK Plugs Only

This product is fitted with a BS1363 plug fused at 5A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace

the plug fuse, use only fuses that are approved to BS1362, rated at 5A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in accordance with following code:

BLUE - NEUTRAL

BROWN - LIVE

As these colours may not correspond with the coloured markings sometimes used to identify the terminals in a plug connect as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked „N“ or coloured BLACK.
The wire which is coloured BROWN must be connected to the terminal which is marked „L“ or coloured RED.
Never connect either of the wires to the big EARTH terminal marked „E“ or coloured GREEN or GREEN AND YELLOW.

PROTECT THE ENVIRONMENT

Do not dispose the product in household waste at the end of its useful life. Disposal can take place at the

Remington® Service Centre or appropriate collection sites.

For further information on recycling see

www.remington-europe.com

SERVICE AND WARRANTY

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period. In the case of a warranty simply call the Remington® Service Center in your region.

The 5 year guarantee is only valid for consumer use.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.