

**Thank you for purchasing your new Remington® product. Before use, please read the instructions carefully, and keep them in a safe place for future reference.**

## **PRODUCT FEATURES**

- A. 200°C Straightener
- B. Advanced ceramic coating
- C. On/off switch with indicator light
- D. Multi-voltage: For use at home or abroad.
- E. When used at 120V the heat up times and

temperatures may vary

F. Heat proof pouch

## **INSTRUCTIONS FOR USE**

Before use make sure hair is clean, dry and tangle-free.

Plug in the unit, and move the switch to the "on" position. The on-indicator will glow red and the styler will be ready to use in approximately 60 seconds.

For extra protection and best results, section hair prior to straightening and spray with heat protection spray. Always straighten the lower layers first. Run the straightener through the entire length of

the hair, without stopping. Repeat only twice per section to prevent hair damage.

► The Straightini is great for creating spikes or flicks on short hair or fringes.

## **IMPORTANT INSTRUCTIONS**

► Due to the extreme heat capabilities of this straightener, extra care should be taken when using and storing.

► While heating, during use and cooling, place on flat, smooth, heat-resistant surface. Only hold unit at the end of the handle.

► Please note regular use of styling

products may deteriorate the coating.

► Do not scratch the surface, as this will deteriorate the effectiveness of the coating.

## **CLEANING AND MAINTENANCE**

Ensure the unit is unplugged and cool. To maintain the effectiveness of your product wipe clean after use with a damp cloth.

Do not use an abrasive cleaning fluid to clean, as damage will occur.

## **SAFETY CAUTIONS**

**WARNING - FOR ADDITIONAL PROTECTION  
THE INSTALLATION OF A RESIDUAL**

CURRENT DEVICE (RCD) WITH A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS ADVISABLE. ASK AN ELECTRICIAN FOR ADVICE.

WARNING - THIS APPLIANCE MUST NOT BE TAKEN INTO A BATHROOM, IT SHOULD NOT BE USED NEAR BATHTUBS, SHOWERS, BASINS OR OTHER VESSELS CONTAINING WATER OR OTHER LIQUIDS.

**This product is not suitable for use in bath or shower.**

THE STYLER SHOULD BE UNPLUGGED FROM MAINS SUPPLY WHEN NOT IN USE.

Do not leave the styler unattended when

switched on. Allow the styler to cool down before storage. Do not immerse in water or other liquids.

Do not place styler on soft material e.g. carpet, bedding, towels, rugs etc. Always ensure the voltage to be used corresponds to the voltage stated on the unit. Keep this product out of reach of children. The use of this appliance by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can give cause to hazards. Persons responsible for their safety should give explicit instructions or supervise the use of the appliance.

Do not use any attachments with this styler, other than those supplied by

Remington®. Avoid allowing any part of the hot plates to contact the face, neck or scalp. Do not wrap the cord around the unit. Check cord regularly for any sign of damage. This product is not intended for commercial or salon use.

Damaged cords can be dangerous. If the supply cord of this unit becomes damaged, discontinue use immediately and contact the Remington® help desk for repair or replacement in order to avoid a hazard.

Special tools are required for any examination, adjustment or repair. Unqualified repair work could lead to hazardous conditions for the user.

We do not accept responsibility for damage to the product, persons or other items(s), caused by misuse, abuse or non-compliance with these instructions.

## **WIRING INSTRUCTIONS UK Plugs Only**

This product is fitted with a BS1363 plug fused at 13A. If the plug is unsuitable, it should be disconnected and an appropriate plug fitted as detailed below. If it is necessary to replace the plug fuse, use only fuses that are approved to BS 1362, rated at 13A. If in doubt consult a qualified electrician.

The wires in the mains lead are coloured in

accordance with following code:

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

The wire which is coloured BLUE must be connected to the terminal which is marked 'N' or coloured BLACK. The wire which is coloured BROWN must be connected to the terminal which is marked 'L' or coloured RED. Never connect either of the wires to the big EARTH terminal marked 'E' or coloured GREEN or GREEN AND YELLOW.

## **PROTECT THE ENVIRONMENT**

Do not dispose the product in household waste at the end of its useful life. Disposal can take place at the Remington® Service Centre or appropriate collection sites.

For further information on recycling see [www.remington-europe.com](http://www.remington-europe.com)

## **SERVICE AND WARRANTY**

This product has been checked and is free of defects. We warrant this product against any defects that are due to faulty material or workmanship for the warranty period from the original date of consumer purchase. If the product should become

defective within the warranty period, we will repair any such defect or elect to replace the product or any part of it without charge provided there is proof of purchase. This does not mean an extension of the warranty period.

In the case of a warranty simply call the Remington® Service Centre in your region.

This warranty is offered over and above your normal statutory rights.

The warranty shall apply in all countries in which our product was sold via an authorised dealer.

This warranty does not include damage to

the product by accident or misuse, abuse, alteration to the product or use inconsistent with the technical and/or safety instructions required. This warranty shall not apply if the product has been dismantled or repaired by a person not authorised by us.