

Preparation and use

Instructions for use: Retain the packaging for future reference.

Initial use:

Please read all the safety instructions carefully before using the device!

Fully charge the foot file before use.

Charging the foot file

Connect the USB cable to the plug and plug it into a power source.

Place the foot file in the charging stand so that the round pins touch. Make sure that both pieces of

equipment are completely dry.

The light will flash green when charging. The green light will shine without flashing once the device has been fully charged. Disconnect the plug from the power supply.

Regular use

Ensure that the rotating head has been securely attached to the foot file.

Do not use it without attaching the rotating head.

The device is switched on and off by pressing. Use the switch to change the speed from slow to fast.

Gently move the rotating head over any hardened skin and continue until you reach the required level of smoothness. The foot file will switch itself off if you press too hard. Wipe or rinse off any excess dead skin

and dry your foot.

Apply a moisturiser and massage it into your wonderfully smooth feet.

Cleaning after use

Switch off the foot file and rinse it under flowing water. Dry it with a clean dry cloth and store it in a cool, dry place out of the reach of children.

Replacing the rotating head

Replace the rotating head once you discover that it has become less effective. Follow the steps given below and check that the foot file has been switched off. Only use Scholl Velvet Smooth Wet & Dry rotating heads with this foot file.

The safety instructions

Only for use on hardened skin on the feet. Do not use the foot file on any other part of the body. Only use it for the designated purposes. Keep out of the reach of children. Do not use the foot file continuously on the same place for more than 3 or 4 seconds. Stop using the product immediately if you experience any irritation or discomfort. Do not use the product on cracked, painful or irritated skin. Always beware of the risk of slipping when using the product in a wet environment. Do not immerse the foot file in water for any length of time. Only charge the battery using the detachable charger supplied with the device. Only use the foot file with the charging stand supplied with the product. Do not use the foot file while it is charging. **WARNING:** Disconnect the foot file from the charging station before cleaning it in water. The charging station is not waterproof: do not charge the device near water, do not rinse it with water and do not use it with wet hands. It is not possible to replace the power cable. If the cable is damaged, the

device must be discarded. Keep the foot file out of the way of long hair and clothing during use. This equipment cannot be used by individuals (including children) who have reduced physical, sensory or mental abilities or by individuals who lack sufficient experience or knowledge. Admissible exceptions involve cases where the individuals in question are under the supervision of an individual who is responsible for their safety or where they have been instructed on how to use the device by said individual. Make sure that children do not play with the device.

Removing the rechargeable battery before disposal

Please keep in mind that this process is irreversible. This product contains a rechargeable lithium ion battery which cannot be replaced and which must not be disposed of with regular household waste. Proceed in accordance with the following instructions and dispose

of the battery at an approved local recycling or collection point in accordance with the local regulations.

Step 1: Use a suitable tool to carefully cut away the soft blue cover from the lower section of the handle all the way up to the upper section of the switch.

Step 2: Remove the screw bracket and use a Phillips head screwdriver to unscrew the screw.

Step 3: Insert a screwdriver into the lower part of the device, remove the lower cover by twisting the screwdriver and expose the internal components.

Step 4: Insert the screwdriver under the circuit board located next to the battery connection and disconnect and release the battery by twisting the connection.

Further instructions are available online at www.scholl.com or by calling the customer care line.

Products with the symbol of a crossed-out rubbish container must be recycled after the completion of their service life and must not be disposed of with regular household waste. DO NOT DISPOSE of the device with regular household waste. Your local domestic appliance retailer may offer a “take back” programme when you purchase a new replacement device. The local authorities may also provide you with assistance and advice concerning recycling points.