

Important safety information

For your own protection from injuries and electric shocks, the following information must be observed when using electrical equipment:

Read all the instructions before using the appliance!

- Only use hair clippers to cut human hair.
- This appliance is not intended for commercial use.
- Only connect the equipment to an AC mains supply.
Note the rated voltage on the rating plate!
- Never touch electrical equipment that has fallen into water. Disconnect from the mains immediately.

- Never use electrical equipment in the bath or shower.
- Always position or store electrical equipment where it cannot fall into water (e.g. wash basin). Avoid electrical equipment being exposed to water and other liquids.
- Always disconnect the appliance from the power supply immediately after use except when charging.
- Disconnect the appliance from the power supply before cleaning.
- This appliance is not suitable for use by people (including children) with physical, sensory or mental disabilities or who do not have the relevant experience or knowledge of using such appliance unless under the supervision of or after having received instruction in the use of the appliance by an individual who is responsible for their safety. Children should be supervised to ensure

they do not play with the appliance.

- Only use the appliance for the proper purpose as described in the operating instructions. Only use accessories recommended by the manufacturer.
- Never use the appliance if the mains cable is damaged. In addition, do not use the appliance if it is not working correctly, if it is damaged or if it has fallen into water. In these cases, send the appliance to our Service Centre to be inspected and repaired. Only specialists properly trained in the handling of electrotechnical devices may repair electrical equipment.
- Do not hold the appliance by the mains cable to carry it and do not use the cable as a handle.
- Keep the appliance away from hot surfaces.
- Make sure that the mains cable is not twisted or

kinked during charging or storing.

- Never insert or allow objects to fall into the openings of the appliance.
- Only use and store the appliance in dry rooms.
- Never use the appliance where aerosol (spray) products are being used or where oxygen is released.
- To protect against injuries, never use the appliance if the blade set is damaged.
- Do not use disposable batteries. Rechargeable battery units can only be obtained from authorized Service Centres.
- The appliance is safety insulated and radio screened. It meets the requirements of EU Directive 2004/108/EC regarding electromagnetic compatibility and EC Low

Voltage

Directive 2006/95/EC. Exhausted batteries/rechargeable batteries should not be disposed of in household waste. Dispose of them in completely discharged state in accordance with legal regulations.

Charging the battery/battery operation

- Switch off the appliance using the on/off switch (Fig. 2 ⑥). The appliance will only recharge when switched off.
- Connect the appliance plug to the appliance (Fig 1).
- The appliance may be operated for max. 180 minutes with the battery fully charged.
- Note: The operating time may be reduced considerably if the blade set is not properly maintained. It should take around 60 minutes for the appliance to charge to

full capacity.

Attaching/removing the attachment comb

- Place the attachment comb onto the cutting edge of the blade set and press it down onto the blade set in the direction of the housing until it clicks into position.
- The attachment comb may be removed by lifting the snap-fit hook in the direction of the arrow. Adjustable variable attachment comb with 6 settings
- Place the centre of the attachment comb on the cutting edge of the blade set and slide it along the guide until it is positioned underneath the snap-fit hook. Push the attachment comb onto the blade set until it clicks into position.
- Use the cutting-length control switch to adjust the cutting length

Level 1 = stubble length = 2 mm

Level 2 = short = 4 mm

Level 3 = medium short = 6 mm

Level 4 = medium = 8 mm

Level 5 = medium long = 10 mm

Level 6 = long = 12 mm

- Remove the attachment comb by pressing (Fig. 4©) and sliding it in the opposite direction to the arrow.

Changing and replacing the blade sets and the shaving attachment

- Switch off the appliance using the on/off switch (Fig. 2 ©).

- The blade set or shaving attachment may be removed by sliding it away from the housing in the direction of the arrow.
- Replace the blade set or shaving attachment by hooking it into the recess on the housing and pressing it down until it clicks into position.

Trimming and outlining the beard

The following section provides suggestions for how to trim the beard and explanations on handling the appliance. Naturally, you may use other methods if you find them preferable.

1. Comb the beard in the direction of growth to see whether some hairs are longer than others.
2. Attach the variable attachment comb to the appliance to trim and thin the beard. Start by using a

long cutting length and hold the trimmer so that the cutting edge faces towards you.

To achieve the best result, start at the sideburns in each case and continue trimming towards the neck. Guide the trimmer towards the chin with gentle, overlapping stroking movements. Work in the beard's direction of growth. If you trim against the beard's direction of growth, the trimmer will cut the hair of the beard considerably shorter and the result obtained may be uneven. Gradually set the trimmer guide to a shorter cutting length until you have achieved the length of beard desired.

You may adjust the variable attachment comb, if you wish, to achieve a shorter cut close to the ears and underneath the chin and then select a longer setting for the front of the face and point of the chin. The setting last selected is retained when the variable attachment

comb is removed until a further adjustment is made. Always ensure that the variable attachment comb clicks firmly into the desired position before starting to trim.

3. Remove the variable attachment comb and cut the outline of the beard. Turn the trimmer so that the blades point towards you. Start under the chin and continue trimming towards the jawbone and ears. Define the outer edge of the beard under the jawbone. Continue the process up to the ears and the hairline.

4. Emphasise the line of the beard by moving the trimmer downwards. Start from the line you have created and work your way slowly from the chin towards the ears. Trim the area under the line of the beard.

5. Use the same technique to define the upper part of the beard.

6. Use the detail blade set for precision cutting. This blade set may be used for precision cutting of sideburns, goatee beards, etc..

Use the standard blade set to outline neck hair, sideburns, moustaches and full beards.

Obtain the desired shape of the hair and beard sections using the trimmer in slow downward strokes.

Use the standard blade set to cut arm and leg hair. The trimmer may be used to cut arm and leg hair to the desired length. Start with a longer setting of the variable attachment comb and gradually shorten it until the desired hair length is achieved.

Use the standard blade set to cut chest and stomach hair. The trimmer may be used with upward strokes to cut torso hair to the desired length. Start with a longer setting of the variable attachment comb and gradually

shorten it until the desired hair length is achieved.

Simply use the shaving attachment for a full clean shave. The shaving attachment is suitable for shaving the whole body. Annoying hair anywhere on the body may be removed easily using the technique described above. Keep the skin on the part of the body to be shaved taut and shave the hair against the direction of growth.

Use the standard and detail blade sets for intimate shaving.

1. Attach the variable attachment comb and select a long setting. Work your way from top to bottom. Gradually shorten the setting of the variable attachment comb to the desired length.
2. Use the detail blade set for difficult to reach narrow areas of the body. Always keep the skin taut. Work on

the body area using slow strokes of the trimmer until the desired result has been achieved.

3. Use the shaving attachment for gentle intimate shaving.

Use the detail blade set for cutting nose hair. The nostrils must be clear. Slowly guide the detail blade set no more than 6 mm into each nostril.

Use the detail blade set to cut ear hair. The outer areas of the ears must be free from earwax. Press the ear flat with one hand and guide the detail blade set no more than 6 mm into the outer ear with the other hand.

CAUTION: Do not guide the detail blade set or other foreign objects into the inner ear. Guide the detail blade set slowly around the margins of the ear pinna to remove hair growth.

Use the detail blade set to cut the eyebrows. Draw the detail blade set slowly over the eyebrows to shorten overhanging hairs. Draw the detail blade set over the brows adjusting the gap between blades and brow to achieve the even brow length desired. Do not press the detail blade set against the brow to avoid removing too much hair.

Trimming using attachment combs

Three attachment combs and three T-blade attachment combs are supplied as accessories - one of each in short, medium and long. The following attachment combs are included as standard:

- Attachment comb 1 mm, 3 mm and 5 mm cutting length.
- T-blade attachment comb 3 mm, 6 mm and 9 mm cutting length. These attachment combs are suitable for

precision cutting and outlining of beards in addition to caring for 'designer stubble'. Use the attachment combs for cutting in the direction of hair growth. Cut against the direction of hair growth to achieve a shorter cut.

Use without attachment comb

- Remove the attachment comb to shape your beard, to correct the outline of your beard and to trim your moustache.
- To straighten the outline, turn the appliance around and apply the top blade vertically in short strokes away from your beard.

Cleaning and Care

- Do not immerse the appliance in water!
- After each use, remove the attachment comb and use the cleaning brush to remove any hairs from the

housing opening and from the blade set. Remove the blade set to do this.

- Clean the shaving attachment after each use. To do this, remove the shaving head by depressing the buttons on both sides to release it and clean it using the cleaning brush provided.
- Use only a soft cloth, which may be dampened slightly, for wiping the appliance. Do not use solvents or abrasives!
- The blade set should be oiled regularly after each use to maintain good cutting performance and long service life. Use only blade set oil for this purpose, order no. 1854-7935 (200 ml).
- Blade set oil may be ordered through your dealer or our Service Centre.

- After prolonged use, the cutting performance will deteriorate despite regular cleaning and oiling and the blade set should then be replaced.
- Replacement blade sets and shaving attachments may be ordered through your dealer or our Service Centre.
- Push on a attachment comb to protect the blade set after cleaning.

Disposal in EU countries

Do not dispose of the appliance with domestic refuse. As part of the EU Directive governing the disposal of electrical and electronic equipment, the appliance is accepted free of charge by local waste collection points or recycling centres. Discharge batteries prior to disposal! Correct disposal will ensure environmental protection and prevent any potentially harmful impacts

on people and the environment.

Disposal in non-EU countries

- Please dispose of the appliance at the end of its service life in an environmentally compatible manner.
- Disconnect the plug-in transformer from the mains power supply and switch on the appliance to discharge the battery completely.
- Remove the blade set or shaving attachment.
- Cut open the rubber handle lengthwise using a knife.
- Pull housing sections apart.
- Detach the rechargeable battery from the circuit board.

- Take the battery to an appropriate collection point.
- Do not connect the appliance to the mains once the rechargeable battery has been removed!