

## **Wahl Pro Turbo Booster 4314**

### **Description of parts**

- ☐ TOURMALINE coated front grill
- ☐ Removable filter for the air inlet aperture
- ☐ Cold shot button
- ☐ Switch for temperature settings
- ☐ On/off switch, fan settings
- ☐ Hanging loop
- ☐ Mains cable
- ☐ Narrow attachment nozzle

☐ Wide attachment nozzle

☐ Styling diffuser

☐ Comb nozzle

## **Operation**

☐ Connect to the mains power supply.

☐ The hairdryer has 3 heat settings and 2 fan settings that, thanks to separate switches, enable a total of 6 temperature-fan settings. For short periods, the cold shot button can be used to fix the hairstyle.

On/off switch, fan setting :

☐ Switch on the appliance at the on/off switch and select the required fan setting.

I.Fan setting 1. for a gentle airflow

II.Fan setting 2. for a strong airflow

☐Select the required temperature setting.

Switch for temperature settings :

☐Temperature setting 1, for cold air

☐Temperature setting 2. for hot air

☐Temperature setting 3. for hotter air

Cold shot:

By pressing the button and keeping it depressed, the hairdryer can be switched to cold air for short periods. To return to the set temperature, simply release the cold-shot button.

❑ Using the on/off switch, switch off the appliance after use

## **TOURMALINE coating**

Negative ions have an antistatic effect and are gentle to the hair. They close the scale layer, creating a smooth, silky hair surface and locking in the natural moisture of the hair, thereby creating the ultimate shine.

## **Styling with the nozzle**

The nozzle can be used to direct the airflow onto the styling brush.

❑ Position the nozzle and press it towards the housing .

❑ To remove the nozzle, simply pull it off in the direction of the arrow.

## **Cleaning and care**

❓ Disconnect from the mains before cleaning the appliance.

❓ Do not immerse the appliance in water<sup>1</sup>

❓ Only wipe the appliance with a soft cloth, which may be dampened slightly.

❓ Do not use solvents or abrasives!

❓ To maintain the performance of your hairdryer, regularly clean the rear filter with a soft brush. To do so, proceed as follows:

❓ Twist the filter in an anti-clockwise direction and remove.

❓ Clean the filter and air inlet with a soft brush.

☑ Replace the filter and turn in a clock wise direction until it clicks into position.

## **Disposal**

Adhere to the relevant legal requirements when disposing of the appliance.

### **Information on the disposal of electrical and electronic appliances in the European Community:**

Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2012/19/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

The appliance will be accepted free of charge by local collection points or recycling centres.

The packaging for this product is made from recyclable materials. Dispose of this in an environmentally friendly manner by recycling it.

## **SAFETY INSTRUCTIONS**

**CAUTION:** The polyethylene bags in which the appliance is stored, as well as the packaging, may be dangerous. Keep the bags out of the reach of babies and children.

Do not use the bags in cradles, baby cots, strollers or playpens. The fine film may stick to a child's nose and mouth and prevent breathing. The bag is not a toy.

**CAUTION:** Do not use over or near sinks, tubs, showers or other water containers. Keep the appliance dry.

If you use the appliance in the bathroom, do not forget to unplug it after each use. The proximity of a water source may be dangerous even if the appliance is

switched off. To provide additional protection of the electrical circuit in the bathroom, we recommend the installation of a residual current device (DDR) for the defined operational differential current not exceeding 30 mA. Please consult your plumber.

Do not immerse the appliance in water or any other liquid.

If the supply cord is damaged, it must be replaced by the manufacturer, its service centre or persons with relevant qualifications in order to avoid a hazard.

Do not use the appliance if it has been dropped or if it shows obvious signs of damage.

Do not leave the appliance unattended when plugged in or switched on.

In the event of problems while using the appliance,



unplug it immediately.

Unplug the appliance after each use and before cleaning.

Take care to avoid any contact of the hot surfaces of the appliance with your skin, especially the ears, eyes, face and neck.

This appliance may be used by children aged 8 years or older and persons with limited physical, sensory or mental capabilities, as well as persons who are inexperienced, if these persons are placed under supervision or if they have been instructed on how to use the appliance safely and if they understand the potential risks which arise from the use of the appliance. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be performed by unsupervised children.

Allow the appliance to cool before storing it.

Do not wrap the cord around the appliance, and make sure that the cord is not twisted or folded before storing it in order to prevent damage.