

How to use

- After 20 minutes, check the temperature of the wax by applying it onto a piece of paper. If it can be applied evenly and easily, it has already reached the right temperature and you can proceed to waxing. If not, leave the heater to heat the wax for another 10-20 minutes. Continuously check visually how the wax flows and spreads. If you make sure that the filling stays inside, the heater can be gently shaken upside down to help the wax flow onto the applicator head.
- Install the wax filling into the heater. Insert the cord and plug in the socket. You will see a red light indicating power. Place on the bracket. The ideal temperature is reached after 20 minutes at the earliest

(30 minutes at the latest).

- Apply wax in the direction of hair growth, from the knees to the ankles. Make sure that the sloping side of the roller is in contact with your skin, so that the roller slides over your skin while you apply the wax.
- Immediately place the strip over the wax, making sure that there is at least 1 cm at the bottom of the strip without any wax. Press gently on the strip over the wax in the direction of hair growth.
- Keep your skin stretched. Grasp the lower end of the strip and tear off the strip against the direction of hair growth as fast as possible. When tearing off, drag the strip in the vicinity of your skin rather than far from the skin. Do not be afraid – the faster you tear off the strip, the more hair you will remove. Press the skin with your hand immediately after the removal of the strip to

soothe it.

BEFORE USING THE APPLIANCE, PLEASE READ THE SAFETY INSTRUCTIONS CAREFULLY!

SAFETY INSTRUCTIONS

CAUTION: The polyethylene bags in which the appliance is stored, as well as the packaging, may be dangerous. Keep the bags out of the reach of babies and children.

Do not use the bags in cradles, baby cots, strollers or playpens. The fine film may stick to a child's nose and mouth and prevent breathing. The bag is not a toy.

CAUTION: Do not use over or near sinks, tubs, showers or other water containers. Keep the appliance dry.

If you use the appliance in the bathroom, do not forget to unplug it after each use. The proximity of a water source may be dangerous even if the appliance is

switched off. To provide additional protection of the electrical circuit in the bathroom, we recommend the installation of a residual current device (DDR) for the defined operational differential current not exceeding 30 mA. Please consult your plumber.

Do not immerse the appliance in water or any other liquid.

If the supply cord is damaged, it must be replaced by the manufacturer, its service centre or persons with relevant qualifications in order to avoid a hazard.

Do not use the appliance if it has been dropped or if it shows obvious signs of damage.

Do not leave the appliance unattended when plugged in or switched on.

In the event of problems while using the appliance,

unplug it immediately.

Unplug the appliance after each use and before cleaning.

Take care to avoid any contact of the hot surfaces of the appliance with your skin, especially the ears, eyes, face and neck.

This appliance may be used by children aged 8 years or older and persons with limited physical, sensory or mental capabilities, as well as persons who are inexperienced, if these persons are placed under supervision or if they have been instructed on how to use the appliance safely and if they understand the potential risks which arise from the use of the appliance. Children must not play with the appliance. The cleaning and maintenance of the appliance may not be performed by unsupervised children.

Allow the appliance to cool before storing it.

Do not wrap the cord around the appliance, and make sure that the cord is not twisted or folded before storing it in order to prevent damage.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

In the interest of all of us and in order to participate actively in the joint protection of the environment:

Do not put the appliance in municipal waste. Use the collection and disposal systems that are available in your country. Some appliances can be recycled or reused.