corrale

coolshine

User manual




Contents

Controls
Using your straightener
Using the heat-extracting attachment
Looking after your straightener

dyson

Controls

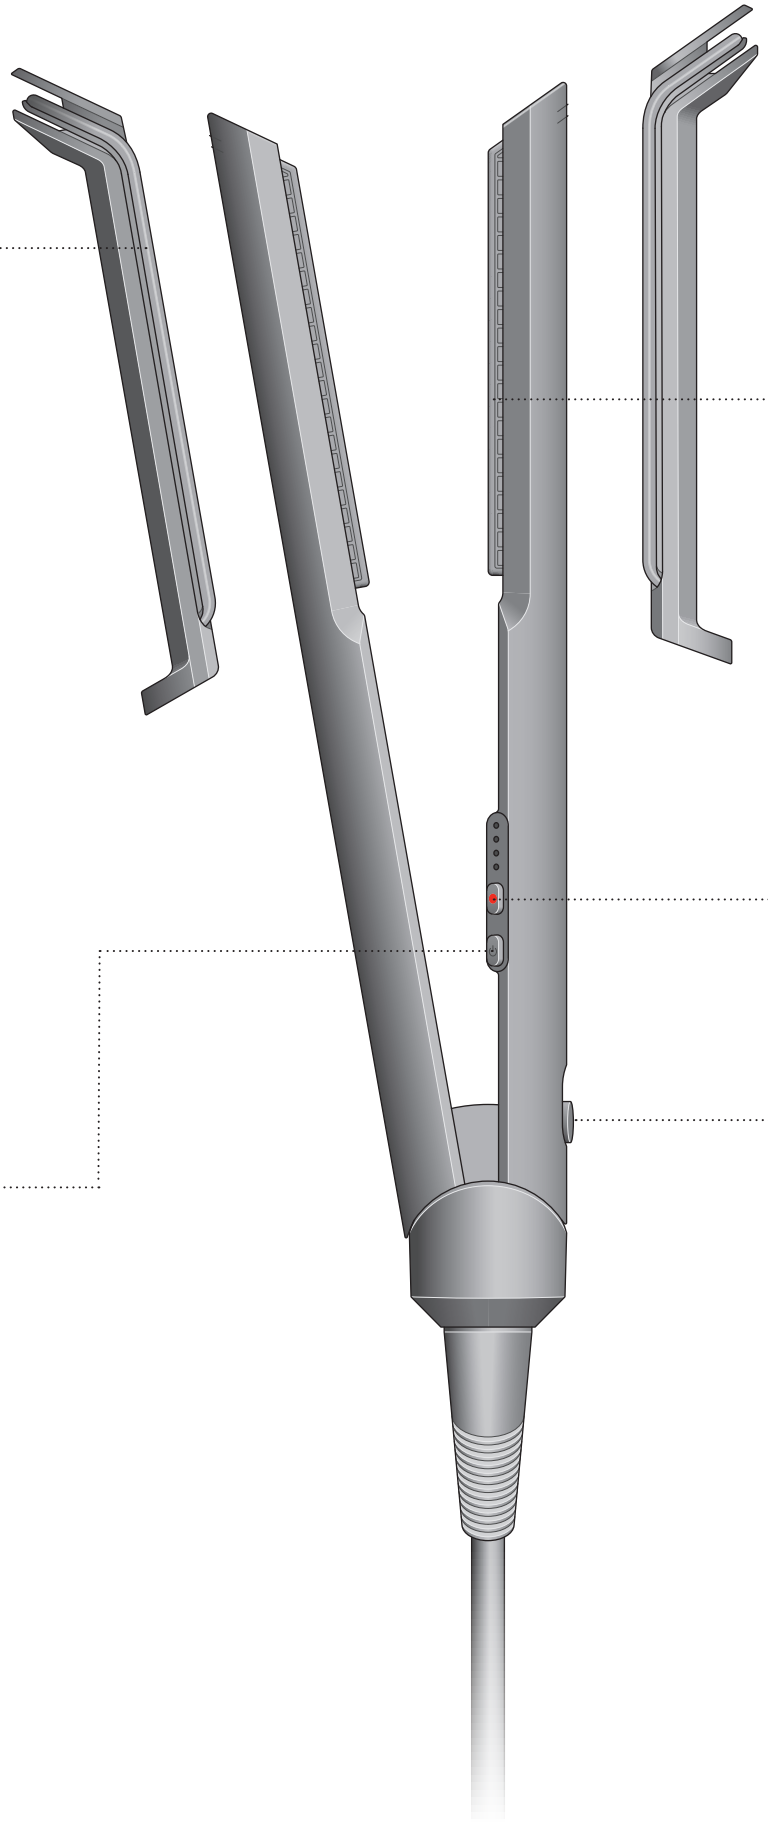

Heat extracting pipes
Engineered to draw heat away from your hair as you style for less heat damage, leaving it feeling cooler to touch after styling.

Flexing plates
Engineered to shape around the hair to keep strands together for controlled straightening and fewer passes.

Temperature control button
Four heat settings to maximise performance and achieve desired styles on all hair types: 145, 165, 185 and 210°C.

Lock button
Fixes the straightener arms shut for immediate storage after use.

Power button
To switch your straightener on and off.

Using your straightener

Getting started
For optimum results, make sure your hair is dry and tangle-free before using your Dyson Corrale CoolShine™ straightener.



Turning on and off
To turn your straightener on, slide the Lock button to open it. Press and hold the Power button.

To turn it off, press and hold the Power button. Close your straightener, slide the Lock button, and leave it to cool.

Sleep mode
If you leave your straightener unattended with the power on for longer than five minutes, the flexing plates will automatically switch off.

Press the Power button to reactivate your straightener to the last temperature setting.


If you leave your straightener unattended with the power on for 30 minutes, it will turn itself off completely.

Adjusting temperature
Your straightener has four settings to enable styling for all hair types and styles.

Press the Temperature control button to cycle between the four heat settings: 145, 165, 185 and 210°C.

Select the temperature that suits your hair type and styling preference. The four LED indicators display the current heat setting.

The lights will flash until your straightener reaches the temperature you've selected.

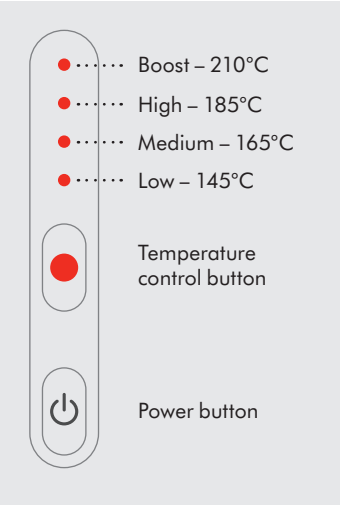

Travelling with your straightener
The Dyson Corrale CoolShine™ straightener has universal voltage for effortless styling, so you can take it with you wherever you're heading.

Go to www.dyson.com.sg for styling tips and guides.

Using the heat-extracting attachment



Tip
Use the heat-extracting attachment to draw heat away from your hair as you style, reducing heat damage and leaving it cooler to touch.


Remove the attachment to style closer to the roots, and for more defined looks such as curls or waves.

To attach
Hold the tip of the attachment and slide it onto the arm of your straightener until you hear a click.

To remove
The plates may still be hot to touch, so wait for them to cool before removing the attachment.

Pinch the tip of the attachment to release it, then slide it up and off the straightener arm.

Looking after your straightener

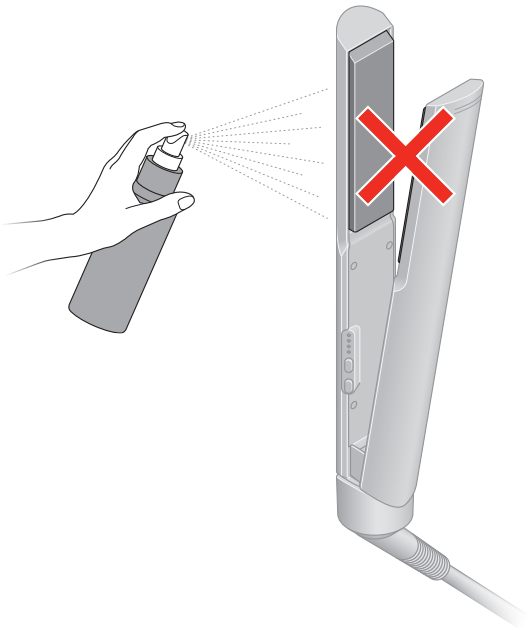

How to clean
Turn off the straightener and leave it to cool before cleaning.

Remove the heat-extracting attachment, if you've been using it.

Clean the flexing plates and attachment with a damp, lint-free cloth. Rub gently to remove any stubborn residue.

Do not use chemicals or abrasive products, as this could damage your straightener.

Ensure everything is fully dry before reassembling.