




TB-1788

Sonic Facial Cleanser

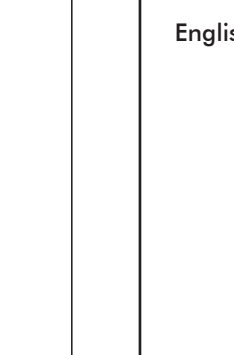

## CONTENT

English.....	1
--------------	---

## Safety Instructions

⚠ Important Notice: This manual is available in two languages: English and Simplified Chinese. If any dispute or confusion arises caused by the translation, the English version shall prevail. To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and keep it for further reference.

## WARNING

- Do not use this appliance under the following conditions: pregnant woman or while nursing; persons allergic to silicone; persons with facial nerve disorders; persons who have metal, silicone, or plastic implants on the face due to fracture or plastic surgery; on areas with open wounds, chapped or swollen skin; if you have severe skin diseases or any other skin condition on the face.
- Verify the appliance before you start using it. Do not use if there is any damage.
- If you feel any discomfort while using the appliance, immediately stop using it and consult a doctor.
- Do not use the appliance while it's charging.
- Do not attempt to modify, disassemble, or repair the appliance by yourself to avoid accidents.

## CAUTION


- Do not share the same appliance with others.
- Keep the appliance out of reach of children.
- Regularly clean the appliance to extend its lifetime.

## Product Specifications

- Name: Sonic Facial Cleanser
- Model No.: TB-1788
- Input: 5V==/310mA
- Power: 3.7V==/0.3W
- Type of Battery: Li-ion 3.7V 500mAh
- Executive Standard: Q/XMMJ1001-2015


## Product Description

- Cleansing Silicone Brush Surface
- Exfoliation Silicone Brush Surface
- Power Button
- + Button
- Button
- Charging Port
- Charging Cable

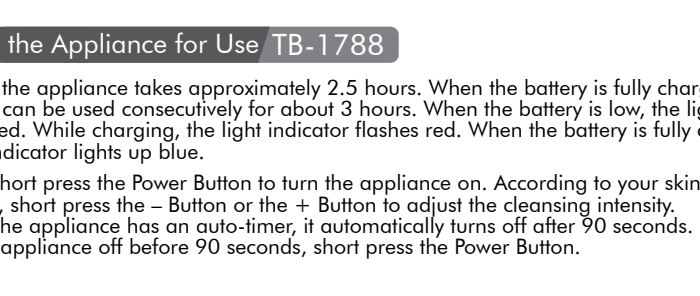

Picture 1

## Certification Marks



## Preparing the Appliance for Use

Charging the appliance takes approximately 2.5 hours. When the battery is fully charged, the appliance can be used consecutively for about 3 hours. When the battery is low, the light indicator lights up red. While charging, the light indicator flashes red. When the battery is fully charged, the light indicator lights up blue.

- Turn On: Short press the Power Button to turn the appliance on. According to your skin type and preference, short press the - Button or the + Button to adjust the cleansing intensity.
- Turn Off: The appliance has an auto-timer, it automatically turns off after 90 seconds. If you want to turn the appliance off before 90 seconds, short press the Power Button.

## How to Use

### Pore Cleansing

- Wet the face with water, apply cleansing gel/cream to the palm of one hand, with the other hand hold the appliance and rub the Cleansing Surface on the cleansing gel/cream to form a foam.
- Apply foam to the face and use the Exfoliation Surface to exfoliate the skin. Gently move the cleansing surface in a circular motion from inside to outside of the face. Recommended cleaning area, order and using time: T-zone (forehead, nose) 20 secs, left and right cheeks 15 secs each (total 30 secs), chin 10 secs, neck 30 secs. (Picture 2)



Picture 2

## Exfoliation

- Wet the face with water, apply cleansing gel/cream to the palm of one hand, with the other hand hold the appliance and rub the Exfoliation Surface on the cleansing gel/cream to form a foam.
- Apply foam to the face and use the Exfoliation Surface to exfoliate the skin. Gently move the cleansing surface in a circular motion from inside to outside of the face. Recommended cleaning area, order and using time: T-zone (forehead, nose) 20 secs, left and right cheeks 15 secs each (total 30 secs), chin 10 secs, neck 30 secs. (Picture 3)
- It is recommended to use the Exfoliation Silicone Brush Surface once a week if you have sensitive skin. If you have normal, combination or oily skin, use the Exfoliation Silicone Brush Surface according to your skin needs.
- After use, turn the appliance off, rinse your face with water and apply moisturizing cream.



Picture 3

## Cleaning & Maintenance

- Make sure the appliance is turned off before you start cleaning it.
- Do not immerse the appliance in water. Wash the appliance surface under running water and dry it with a dry cloth.
- Do not use lubricants, detergents, polishing agents or air fresheners on this appliance.
- Do not use hot water above 40°C or corrosive liquids to clean the silicone surfaces.
- Do not use clay-based, silicone-based, grainy cleansers and exfoliators, as they may damage the brush head surface of the appliance.

## Storage

This appliance has a lithium battery. Do not place or store the appliance for long periods in a hot or humid environment. If you do not intend to use the appliance for a long time, store it with the battery full.

## Recycling

The built-in battery contains substances that may pollute the environment. When disposing of this appliance, please do not put it in the general household waste. Please dispose of this appliance in an official recycling point to contribute to environmental protection.

## Warranty & Support

### Troubleshooting

Problem	Possible Cause	Solution
I press the Power Button and the appliance does not work properly.	The battery is running low or is out of power.	Charge the appliance.
The Charging Indicator does not light up.	The Charging Cable is not inserted correctly.	Insert the Charging Cable into the Charging Port correctly.
Other problems.		Please consult your local dealer.

Note: If the appliance still does not work properly after using the above solutions, please stop using the appliance and contact your local dealer.

## After-Sales Service

Please visit our website [www.touchbeauty.com](http://www.touchbeauty.com) or contact our customer service team [customer@touchbeauty.com](mailto:customer@touchbeauty.com) if you need to learn about our products or if you need any information. You can also contact an affiliate dealer in your country.

## MANUFACTURER

TOUCHBEAUTY BEAUTY & HEALTH (SHENZHEN) CO., LTD

## ADDRESS

601 & 602, Block F5, TCL International E-City, 1001 Zhongshanyuan Road, Shuguang Community, Xili Subdistrict, Nanshan District, Shenzhen, China.