


FOREO  
SWEDEN



# LUNA™ 4 hair

2-IN-1 SCALP MASSAGER  
Strengthens Hair & Purifies Scalp

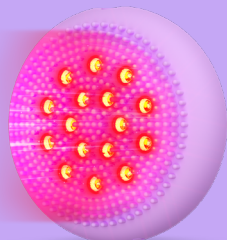

ONLINE MANUAL

# FULL USER MANUAL

## GETTING STARTED

Congratulations on discovering smarter scalp and hair care with LUNA™ 4 hair. Before you begin to enjoy all the benefits of sophisticated technology in the comfort of your home, please take a few moments to carefully read the instructions in this manual.

Please READ ALL INSTRUCTIONS BEFORE USE and utilize this device only for its intended use as described in this manual.

**⚠ WARNING: NO MODIFICATION OF THIS EQUIPMENT IS ALLOWED.**

## LUNA™ 4 hair OVERVIEW

Healthy hair starts with a healthy scalp. Combining Red LED & T-Sonic™ massage, this device wakes up tired hair follicles & ensures your scalp is clean, healthy & in optimal condition to nurture thicker, fuller & healthier hair growth.

## GETTING TO KNOW LUNA™ 4 hair

### UNIVERSAL POWER BUTTON

Press once to turn on. Press for 3 sec to turn off. From off, press for 3 sec to put device in Bluetooth pairing mode to connect to the app.

### 16 RED LED LIGHTS (650nm)

Red LED light is clinically proven to stimulate hair follicles so they produce thicker hairs, helping to prevent hair loss.

### ULTRA-HYGIENIC BRISTLES

395 silicone bristles gently yet effectively loosen buildup on the scalp to stop dead skin, sweat and oil from clogging hair follicles and causing hair loss. They also help part hair, so the LED light can reach the scalp directly.

### CHARGING PORT

Up to 100 mins of use per USB charge. 100% waterproof closure. Charging cable provided.

### PATENTED T-SONIC™ MASSAGE


Up to 6500 pulsations per minute gently stimulate the scalp, helping to boost blood flow, so oxygen and essential nutrients can reach the hair follicle.

### BACTERIA-RESISTANT SILICONE

100% waterproof to allow use in the shower, quick-drying and non-porous to prevent bacteria buildup.

### SMART SWEDISH DESIGN

Ultra-lightweight, compact and ergonomically shaped to fit perfectly in your hand, for comfortable treatments.

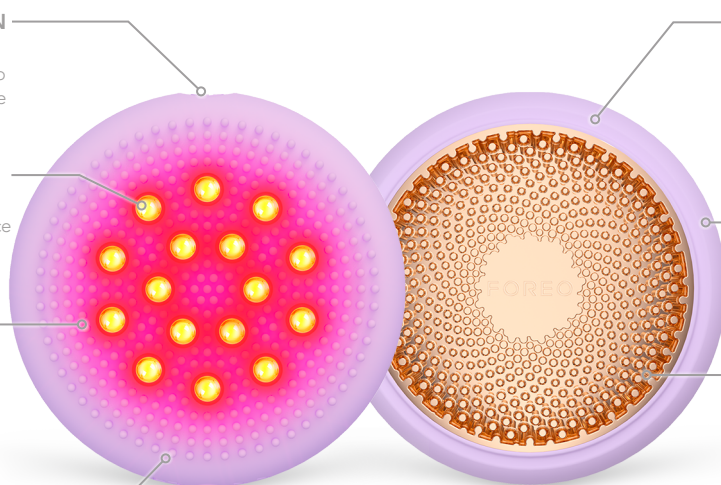

## HOW TO USE YOUR LUNA™ 4 hair UNLOCK YOUR DEVICE

Before first use, download the FOREO For You mobile app to unlock and register your device. Follow these simple steps:

1. Download the FOREO For You app on your mobile phone.
2. Log in to your account or sign up for a new one.
3. Add device (on the top of your screen).
4. Choose device series.
5. Press and hold the universal button to connect your device to the mobile app.
6. Fill in the purchase information.

[www.foreo.com/app](http://www.foreo.com/app)



## HOW TO USE

Before first use, download the FOREO For You app to unlock your device, and register the warranty. Turn device on by pressing the universal power button. Turn device off by pressing and holding the universal power button for 3 seconds.



### STEP 1

#### 1. Purify Scalp

(Hair wash days)

After wetting your hair and before applying shampoo, turn LUNA™ 4 hair on. Then press the device firmly on the scalp, and slowly glide it in very tight circular motions all over the scalp, paying particular attention to problem areas. Once finished, turn the device off.



### STEP 2

#### 2. Repair Hair

(Hair wash days)

Apply and rinse off your shampoo, Then apply your desired silicone-free conditioner or hair mask. Turn LUNA™ 4 hair on, and glide the device through the lengths of your hair to evenly distribute the conditioner throughout your strands. Once finished, turn the device off, and rinse off your conditioner.



### STEP 3

#### 3. Protect & Strengthen

(Hair wash & Non-hair wash days)

Complete your treatment by applying a few drops of LUNA™ Dual-Peptide Scalp Serum onto towel-dried or completely dry hair. Massage into scalp and hair follicles with your LUNA™ 4 hair device or your fingertips, as desired.

## CLEANING YOUR LUNA™ 4 hair

Always clean LUNA™ 4 hair thoroughly after use. Wash the brush surface with water and soap, then rinse with warm water. Pat dry with a lint-free cloth or towel. For optimal results, we recommend spraying the device with FOREO Silicone Cleaning Spray once a week, and rinsing with warm water.

**NOTE:** Never use cleaning products containing alcohol, petrol, or acetone, as they may irritate the scalp and damage the silicone.

## IMPORTANT FOR OPTIMUM SAFETY

- Massaging your scalp with LUNA™ 4 hair should be comfortable – if you experience any discomfort, discontinue use immediately and consult a physician.
- If taking a photosensitizing medication or herbal remedy, seek medical advice prior to application of the appliance as use may harm the skin.
- Do not stare directly at the LED lights.
- This appliance is not intended for the treatment of medical conditions. Medical advice should be sought to address, for example, moles, skin rash, itchy skin, skin fungus or infection, skin bumps, or skin tags; a list of possible side effects, including blistering, pain, and scarring.
- This product should not be used by children. Close supervision is necessary when this product is used by, on, or near children and those with reduced physical and mental abilities.
- For reasons of hygiene, we do not recommend sharing your LUNA™ 4 hair with anyone else.
- Avoid leaving your LUNA™ 4 hair in direct sunlight and never expose it to extreme heat or boiling water.
- Discontinue use if this product appears damaged in any way.
- This product contains no serviceable parts.
- Do not tamper or attempt to disassemble the product as this may cause damage to the unit.
- Do not use while driving or operating heavy machinery.
- Do not insert any object into any opening of the device.
- Do not use the device if it is overheating or you suspect that it is malfunctioning.
- This device should only be used with a SELV power adapter.
- Before charging, make sure that the plug and socket are completely dry. Failure to do so may result in electric shock, short circuit, or fire.

- Do not use the device while charging. Discontinue use if this device or charger is not working properly or appears damaged in any way. Only use the power cord supplied with your device.
- The device contains a non-replaceable battery. The battery must be removed from the appliance before it is disposed of. The appliance must be disconnected from the supply mains when removing the battery, and the battery is to be disposed of safely.
- Given the efficiency of the device, we recommend that you do not use LUNA™ 4 hair for more than 3 minutes per treatment area.
- Use this device only for its intended use as described in this manual. If you do not find the answer to your specific question, or if you have any other questions regarding the device's operation, please visit [foreo.com/support](https://foreo.com/support).

## TROUBLESHOOTING

Precautions to be taken in the event of changes in the performance of LUNA™ 4 hair:

**If LUNA™ 4 hair is not activated when pressing the universal button:**

- Battery is empty. Recharge using the USB charging cable for up to 1.5 hours until fully charged, and then restart your device by pressing the universal button.

**If LUNA™ 4 hair cannot be switched off and/or universal button does not respond:**

- Microprocessor is temporarily malfunctioning. Press and hold the universal button to restart the device.

**If LUNA™ 4 hair won't sync to the FOREO app:**

- Ensure that your device is fully charged and that your Bluetooth is turned on.
- Switch your Bluetooth off and then on again to try reconnecting.
- Close the FOREO app and then reopen it to restart the process.
- Delete and reinstall the application - perhaps the application simply needs to be updated. After deleting and reinstalling the application, make sure to restart your phone.
- Delete your phone's cookies and cache memory.

## WARRANTY TERMS & CONDITIONS

### REGISTER WARRANTY

To activate your 2-Year Limited Warranty, register through the FOREO For You app, or visit [foreo.com/product-registration](https://foreo.com/product-registration) for more information.

### 2-YEAR LIMITED WARRANTY

FOREO warrants this device for a period of TWO (2) YEARS after the original date of purchase against defects due to faulty workmanship or materials arising from Normal Use of the device. The warranty covers working parts that affect the function of the device. It does NOT cover cosmetic deterioration caused by fair wear and tear, or damage caused by accident, misuse or neglect. Any attempt to open or take apart the device (or its accessories) will void the warranty. If you discover a defect and notify FOREO during the warranty period, FOREO will, at its discretion, replace the device free of charge. Claims under warranty must be supported by reasonable evidence that the date of the claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.

To claim your warranty, you must log in to your account at [www.foreo.com](https://www.foreo.com) and then select the option to make a warranty claim. Shipping costs are nonrefundable. This undertaking is in addition to your statutory rights as a consumer and does not affect those rights in any way.

### DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).




This device should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this device is disposed of correctly, you will help prevent the potential negative consequences for the environment and human health which could be caused by inappropriate waste handling of the device. The recycling of materials will also help conserve natural resources.

For more information about the recycling of your device, please contact your local household waste disposal service or your place of purchase.

## BATTERY REMOVAL

**NOTE:** This process is not reversible. Opening the device will void its warranty. This action must only be undertaken when the device is ready to be disposed of.

Because this device contains a lithium-ion battery, the battery must be removed before disposal and should not be thrown away with household waste. In order to do this, remove the silicone outer layer, open the inner plastic shell, remove the battery, and dispose of it in accordance with your local environmental regulations. Wear gloves during this process for your safety. Detailed visual instructions are provided below:

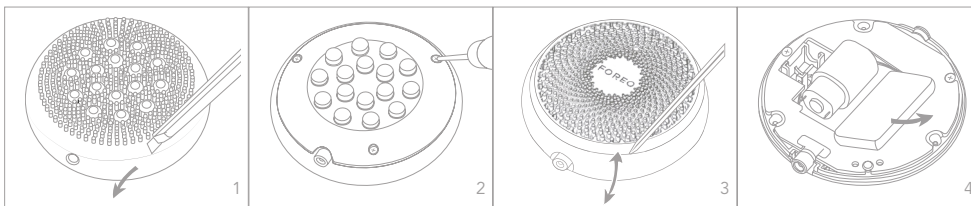

## SPECIFICATIONS

|                  |   |
|------------------|---|
| MATERIALS:       | Body-safe silicone, PC + ABS plastic      |
| SIZE:            | H81 x W81 x D39 mm                        |
| WEIGHT:          | 111 g                                     |
| BATTERY:         | Li-ion 520mAh 3.7V                        |
| USES PER CHARGE: | Up to 100 mins of use per 1.5 hour charge |
| STANDBY:         | 90 days                                   |
| MAX NOISE LEVEL: | <50 dB                                    |

**Disclaimer:** Users of this device do so at their own risk. Neither FOREO nor its retailers assume any responsibility or liability for any injuries or damages, physical or otherwise, resulting directly or indirectly from the use of this device. Furthermore, FOREO reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This device complies with Part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

FOREO declares that this device is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity for the product is available at [www.foreo.com/support/eu-conformity](http://www.foreo.com/support/eu-conformity).

Model may be changed for improvements without notice.

©2024 FOREO AB. ALL RIGHTS RESERVED. MANUFACTURED FOR: FOREO AB.

EU DISTR.: FOREO AB, KARLAVÄGEN 41, 114 31 STOCKHOLM, SWEDEN.

US DISTR.: FOREO INC., 1525 E PAMA LANE, LAS VEGAS, NV 89119, USA.

AUS DISTR.: FOREO AUS., 6 PROHASKY STREET, PORT MELBOURNE, VIC, 3207 AUSTRALIA.

UK RP: FOREO LTD., LAWFORD HOUSE, ALBERT PLACE, N3 1QA LONDON.

**WWW.FOREO.COM**